



Torana 253/308 Compressor Mount

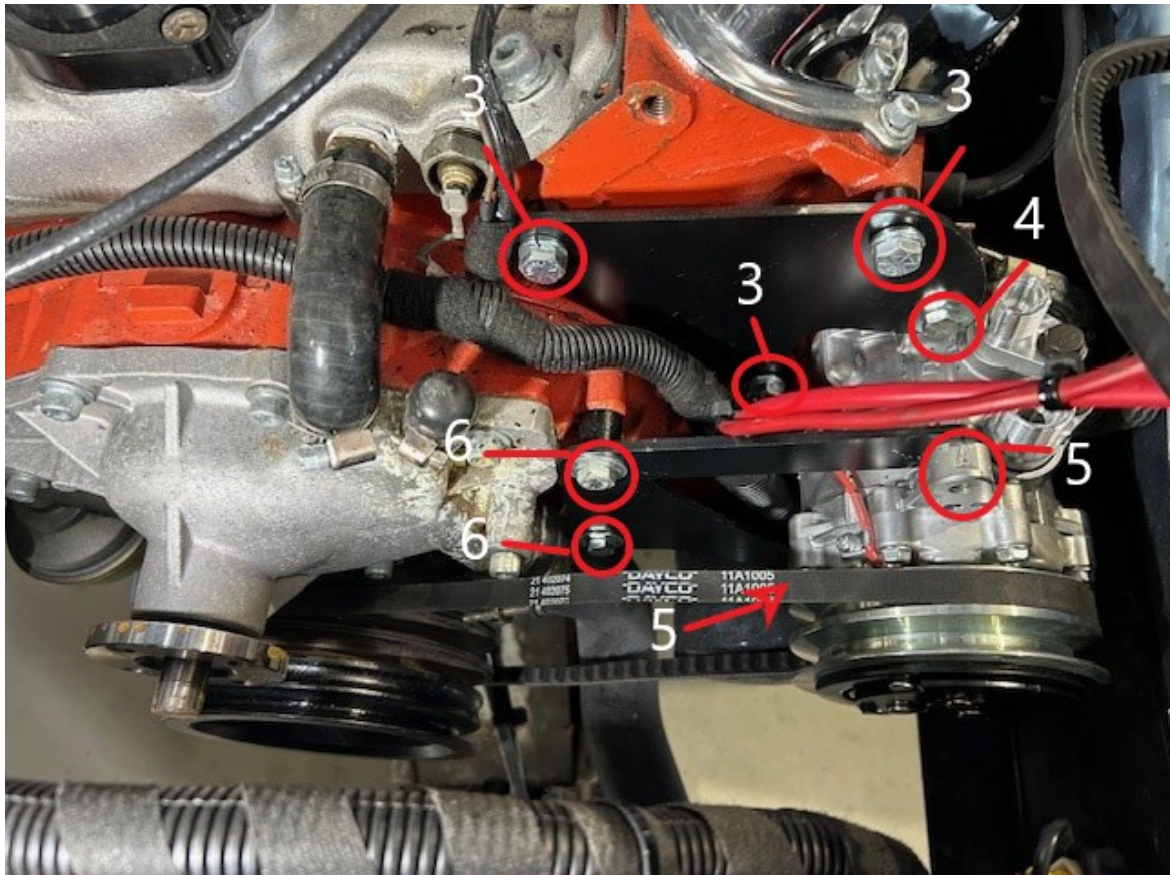

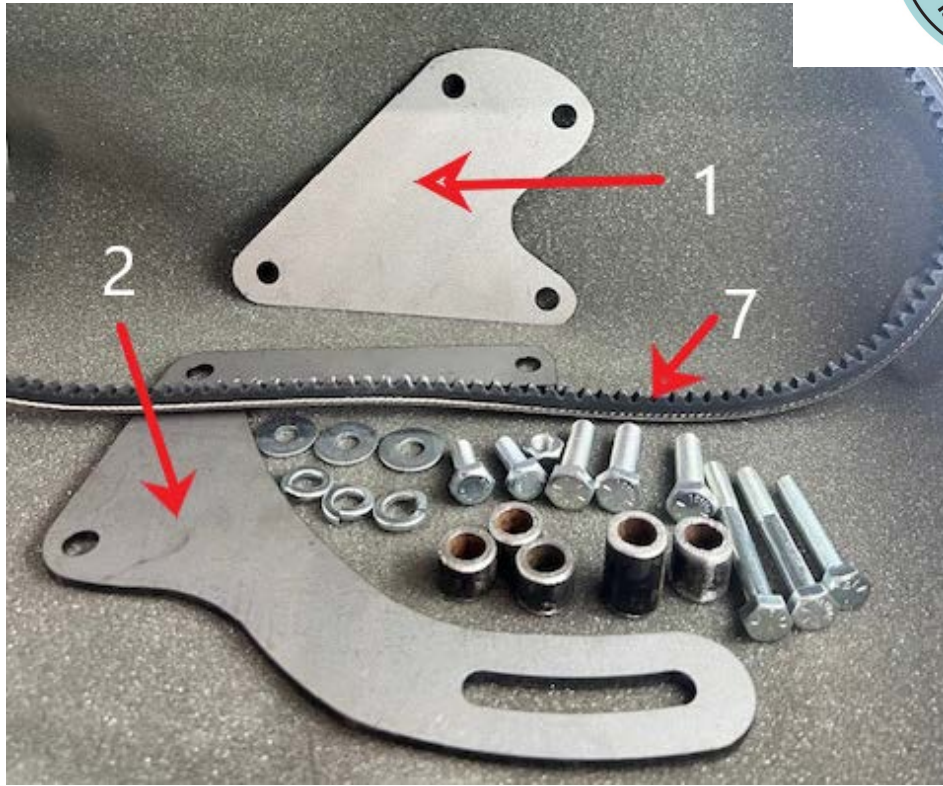

1. Top Compressor Bracket
2. Bottom Compressor Bracket
3. 3/8 UNC, 1 1/4 Bolts with 13mm Spacers
4. 5/16, 1 3/4 Bolt with nutlock
5. M8, 20mm bolts
6. 5/16 bolts into timing case, spacers placed behind bracket.
Top spacer 17mm with 2.5 inch bolt. Bottom spacer
25mm with 2 3/4 bolt
7. 11A1005 Belt (Supplied)
Note; Requires Commodore VN-VS V8 3 Row Crank
Pulley, use the inner 1st Row