

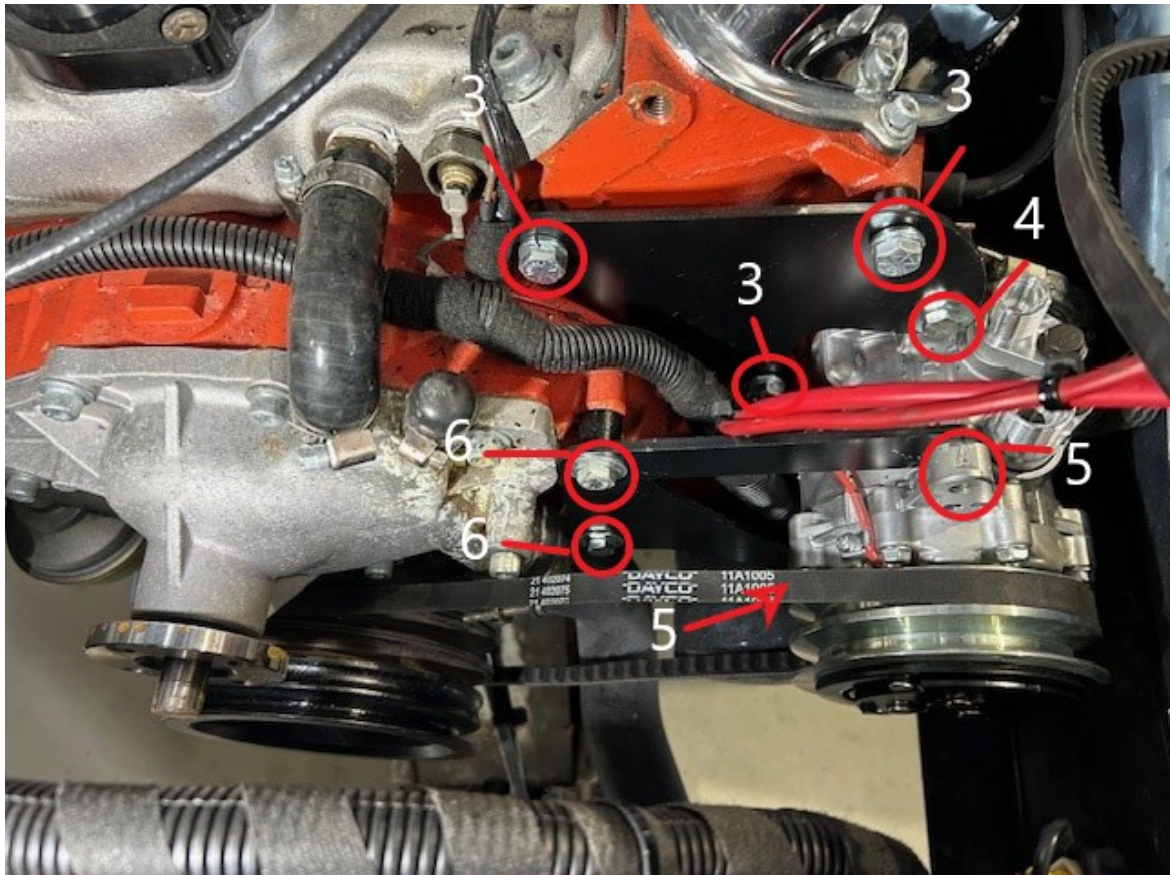


Torana 253/308 Compressor Mount

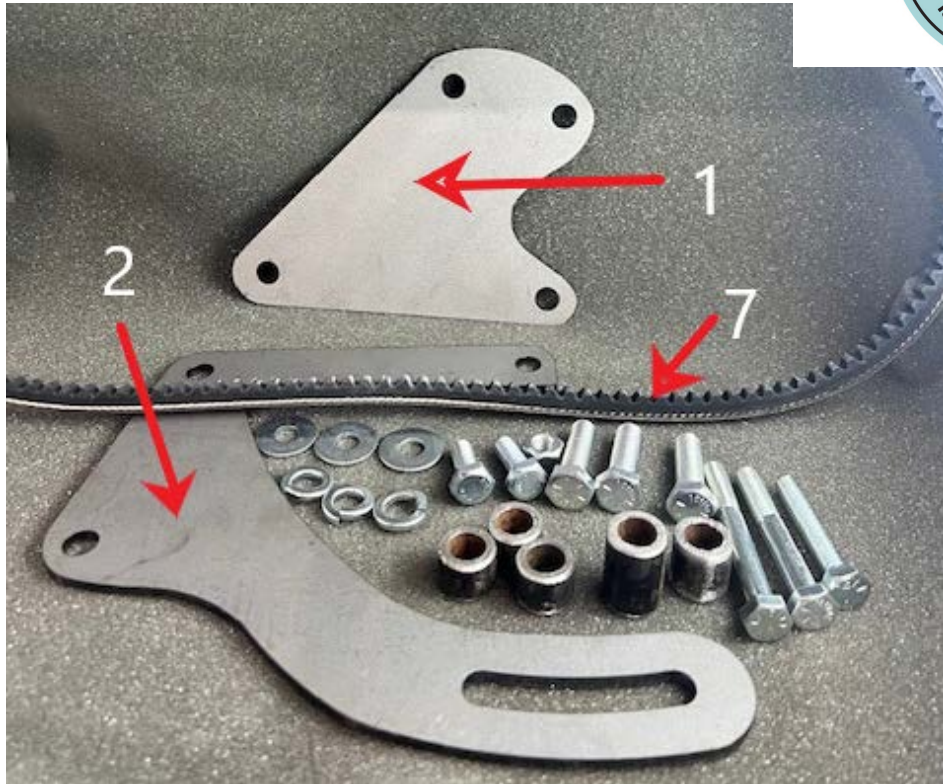

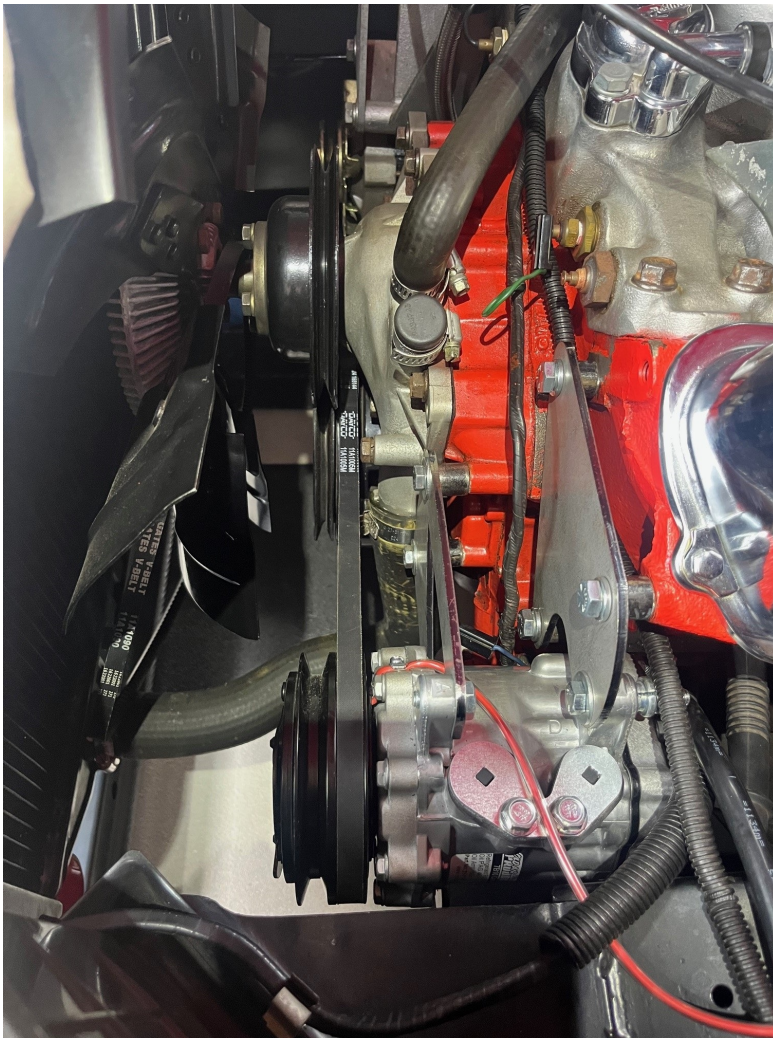

1. Top Compressor Bracket
2. Bottom Compressor Bracket
3. 3/8 UNC, 1 1/4 Bolts with 13mm Spacers
4. 5/16, 1 3/4 Bolt with nutlock
5. M8, 20mm bolts
6. 5/16 bolts into timing case, spacers placed behind bracket. Top spacer 17mm with 2.5 inch bolt. Bottom spacer 25mm with 2 3/4 bolt
7. 11A1005 Belt (Supplied)

Note; Requires Commodore VN-VS V8 3 Row Crank Pulley, use the inner 1st Row

If your vehicle has a oil pressure gauge sensor it will require a 90 Deg fitting to clear the compressor and mount (Aeroflow AF914-04S)